

# Series M40

Panel meter 96x48mm



## Model M40-T

Pt100/RTD  
Thermocouples

*Panel meter for Pt100/RTD (2 and 3 wires), and thermocouples J, K, T, E, S, R, N, C, L and X with temperature display in degrees celsius (°C) or fahrenheit (°F). Selectable Pt100/RTD resolution at 1° or 0.1°, and manual offset available. Thermocouple measure with internal CJC selectable (enabled or disabled). Selectable behavior in case of sensor break ('to\_high' or 'to\_low'). Housing 96x48mm DIN standard. Display in 4 digits plus negative sign. Maximum and minimum display memory, steps, alarms with single or double setpoints, 5 levels of brightness, ... Universal AC and DC power modules and up to 3 modules for signal retransmission and control.*

# Meter M40-T

## Panel meter 96x48mm size for Pt100/RTD and thermocouples

Panel meter for temperature signals, accepts Pt100/RTD with 2 and 3 wires, and thermocouples J, K, T, E, S, R, N, C, L and X. Temperature display in degrees celsius (°C) or fahrenheit (°F). Thermocouple cold junction compensation selectable. Manual offset selectable. Selectable behavior for alarms in case of sensor break ('to\_high' or 'to\_low').

Instrument with 96x48mm standard DIN size. Resolution 4 digits plus negative sign.

Management for up to 4 alarms with 1 or 2 setpoints each alarm, with hysteresis and delays. Provides memory for maximum and minimum, display on selectable steps, password and selectable levels of brightness.

Power options with universal AC and DC ranges, and space for three additional control and/or signal retransmission modules.

Standard IP54 front protection, with optional upgrade to IP65 protection.

Connections via plug-in screw terminals and configuration via three front push-buttons. For application on industrial environments.

### Order Reference

Model	Power	Option1	Option2	Option3	Others
M40	T	H	---	---	---
	-H (85-265 Vac/dc) -L (11-60 Vdc and 24/48 Vac)	-R1 (1 relay) -AO (Analogue output) -(empty)	-R1 (1 relay) -AO (Analogue output) -(empty)	-R1 (1 relay) -AO (Analogue output) -(empty)	-65 (IP65) -(empty)

### Precautions on installation



Risk of electrical shock. Instrument terminals can be connected to dangerous voltage.



Instrument protected with double isolation. No earth connection required.



Instrument is in conformity with CE rules and regulations. See "CE Declaration of Conformity" further in this document.

This instrument has been designed and verified according to the 61010-1 CE security regulation, and is designed for applications on industrial environments. See the "CE Declaration of Conformity" further in this document for information on the category of measure and the degree of pollution levels that apply.

Installation of this instrument must be performed by qualified personnel only. This manual contains the appropriate information for the installation. Using the instrument in ways not specified by the manufacturer may lead to a reduction on the specified protection level. Disconnect the instrument from power before starting any maintenance and / or installation action.

The instrument does not have a general switch and will start operation as soon as power is connected. The instrument does not have protection fuse, the fuse must be added during installation.


The instrument is designed to be panel mounted. An appropriate ventilation of the instrument must be assured. Do not expose the instrument to excess of humidity. Maintain clean by using a humid rag and do NOT use abrasive products such as alcohols, solvents, etc.

General recommendations for electrical installations apply, and for proper functionality we recommend : if possible, install the instrument far from electrical noise or magnetic field generators such as power relays, electrical motors, speed variators, ... If possible, do not install along the same conduits power cables (power, motor controllers, electrovalves, ...) together with signal and/or control cables.

Before proceeding to the power connection, verify that the voltage level available matches the power levels indicated in the label on the instrument.



In case of fire, disconnect the instrument from the power line, fire alarm according to local rules, disconnect the air conditioning, attack fire with carbonic snow, never with water.

### Front View

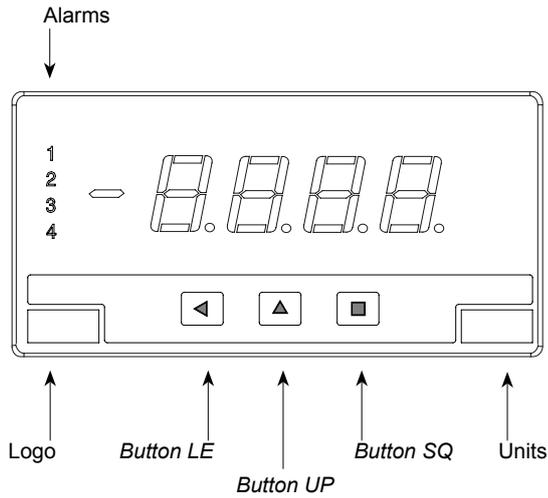


### Input signal connections - Pt100/RTD

Measure can be selected for 2 or 3 wire systems.

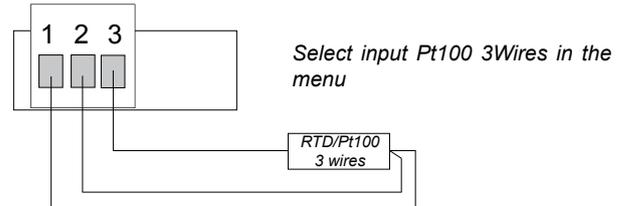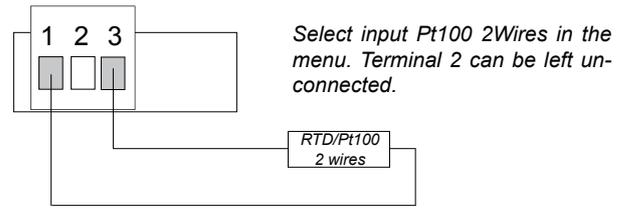


### Rear View

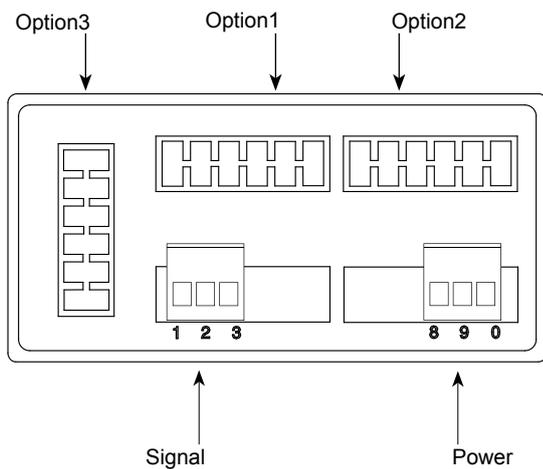


### Input signal connections - Thermocouple

To configure, select the appropriate thermocouple type in the configuration menu.

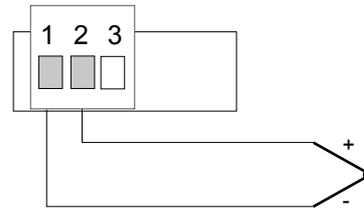

### Power Connections

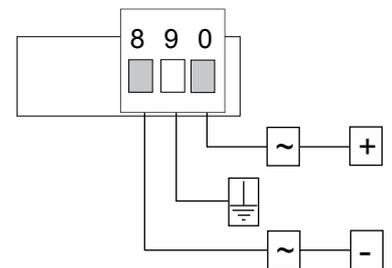

Earth connection - Although a terminal is offered for earth connection, the connection is optional. The instrument does not need this connection for correct functioning nor for compliance with the security regulations.

Fuse - To comply with security regulation 61010-1, add to the power line a protection fuse acting as disconnection element, easily accessible to the operator and identified as a protection device.

Power "H" fuse 250mA time-lag

Power "L" fuse 400mA time-lag

Technical Data

**Digits** 4  
 Type 7 segments, red  
 Height 14 mm  
 Display maximum 9999  
 Display minimum -9999  
 Decimal point selectable 8.8.8.8.  
 Overrange 9999 flashing  
 Underrange -9999 flashing

**Signals** accepted Pt100/RTD and Thermocouples  
 Temperature scale ITS90  
 Display units °C or °F, selectable

**Thermocouple** data

Thermocouples accepted J, K, T, E, S, R, N, C, L, X  
*(Thermocouple X is a linear 10uV/°C signal)*  
 Resolution 1°  
 Ranges see table 3  
 Max. error at 25°C see table 3  
 Offset drift see table 3  
 Span drift\* see table 3  
*\*Note - span drift includes also the offset drift*  
 CJC automatic ("On"/"Off" selectable)  
 CJC accuracy <1.0°C  
 CJC thermal drift <0.04°/°C  
 On sensor break "to\_high" or "to\_low", selectable  
 Acquisitions 3 acquisitions / second

**Pt100/RTD** data

Sensors accepted 2 or 3 wire, selectable  
 Resolution 1° or 0.1°, selectable  
 Ranges see table 3  
 Alpha Alpha385 or Alpha390, selectable  
 Max. error at 25°C see table 3  
 Offset drift see table 3  
 Span drift \* see table 3  
*\*Note - span drift includes also the offset drift*  
 Cable compensation up to 14 Ohm  
 Compensation accuracy <0.02°C / Ohm  
 Acquisitions 4 acquisitions / second

Technical Data (cont.)

**Power**  
 Power "H" 85 to 265 Vac/dc  
 Power "L" 11 to 60 Vdc and 24/48Vac  
 Consumption <4W  
 Isolation 3500Veff for power "H"  
 2000Veff for power "L"  
 all levels tested for 60 seconds

**Configuration** 3 frontal push buttons

**Functions available**

Steps yes, configurable  
 Memory of maximum yes  
 Memory of minimum yes  
 Password yes, configurable  
 Double setpoints yes  
 Brightness control yes, 5 levels

**Optional boards** 3 free slots

**Mechanical**

Mounting panel  
 Connections plug-in screw terminals  
 Weight <150 grams  
 Housing materials ABS, polycarbonate, vergaflex  
 Front size 96x48mm  
 Panel cut-out 92x44mm  
 Deep from panel 91mm (including terminal)

**Protection**

IP54 standard  
 IP65 optional (Front sealed. Opening the front breaks the seal)


**Temperature** Operation

0 to 50°C  
 Temperature Storage -20 to +70°C  
 Warm-up 15 minutes

Type	Range °C	Max. error at 25°C*	Range °F	Offset drift	Span drift* *includes offset drift
Pt100/RTD	800 / -200 °C	<0.2°C	1562 / -328 °F	0.05°/°C	0.10°/°C
Thermocouple J	1200 / -200 °C	<2°C	2192 / -328 °F	0.05°/°C	0.20°/°C
Thermocouple K	1372 / -200 °C	<2°C	2372 / -328 °F	0.05°/°C	0.20°/°C
Thermocouple T	400 / -200 °C	<2°C	752 / -328 °F	0.02°/°C	0.02°/°C
Thermocouple E	1000 / -200 °C	<2°C	1832 / -328 °F	0.05°/°C	0.20°/°C
Thermocouple S	1768 / -50 °C	<4°C	2282 / -58 °F	0.20°/°C	0.20°/°C
Thermocouple R	1600 / -50 °C	<4°C	2912 / -58 °F	0.20°/°C	0.20°/°C
Thermocouple N	1300 / -200 °C	<2°C	2372 / -328 °F	0.05°/°C	0.20°/°C
Thermocouple C	2320 / 0 °C	<2°C	4192 / 32 °F	0.02°/°C	0.02°/°C
Thermocouple L	900 / -200 °C	<2°C	1652 / -328 °F	0.05°/°C	0.20°/°C
Thermocouple X	4000 / -200 °C	<2°C	7232 / -328 °F	0.02°/°C	0.02°/°C

Table 3 - Thermocouple and PT100/RTD specifications

### Mechanical Dimensions (mm)

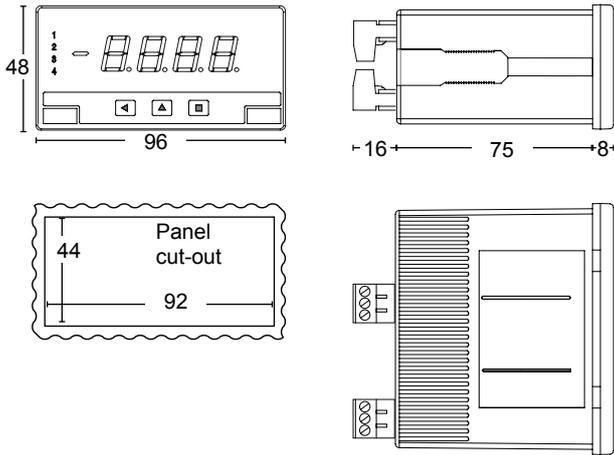

### Information Menu - Operation

To enter the "Information Menu" press the SQ button. The "Information Menu" allows to visualize information and does not allow to modify the configuration of the instrument. It is not affected by the "PASSWord" function. During operation with the "Information Menu", alarms remain "frozen" and are kept on-hold. Leaving the "Information Menu" returns to the measuring state of the instrument, without restart.

**Information Menu Tree** - See page 5.

**Rollback** - After 30 seconds without interaction from the operator, the instrument leaves the "Information Menu".

**Button SQ** - Selects the visible option.

**Button UP** - Moves vertically along the available menu options.

**Button LE** - Leaves selected menu or leaves the "Information Menu".

### Information Menu - Description

**Configuration (Conf)** - Information on the configured input sensor and the degrees selected.


**Maximum (MAX)** - Value of the maximum display.

**Minimum (Min)** - Value of the minimum display.

**AlarmX (ALX)** - Configuration of alarm X. The sequence of information shows if the alarm is being managed ("On/Off"), the alarm type ("Max/Min"), the setpoint, the hysteresis value, the activation delay and the value of setpoint2 ("Off" or the setpoint2 value).

**OptionX (OptX)** - Type of module installed. If there is no module shows "nonE".

### Information Menu

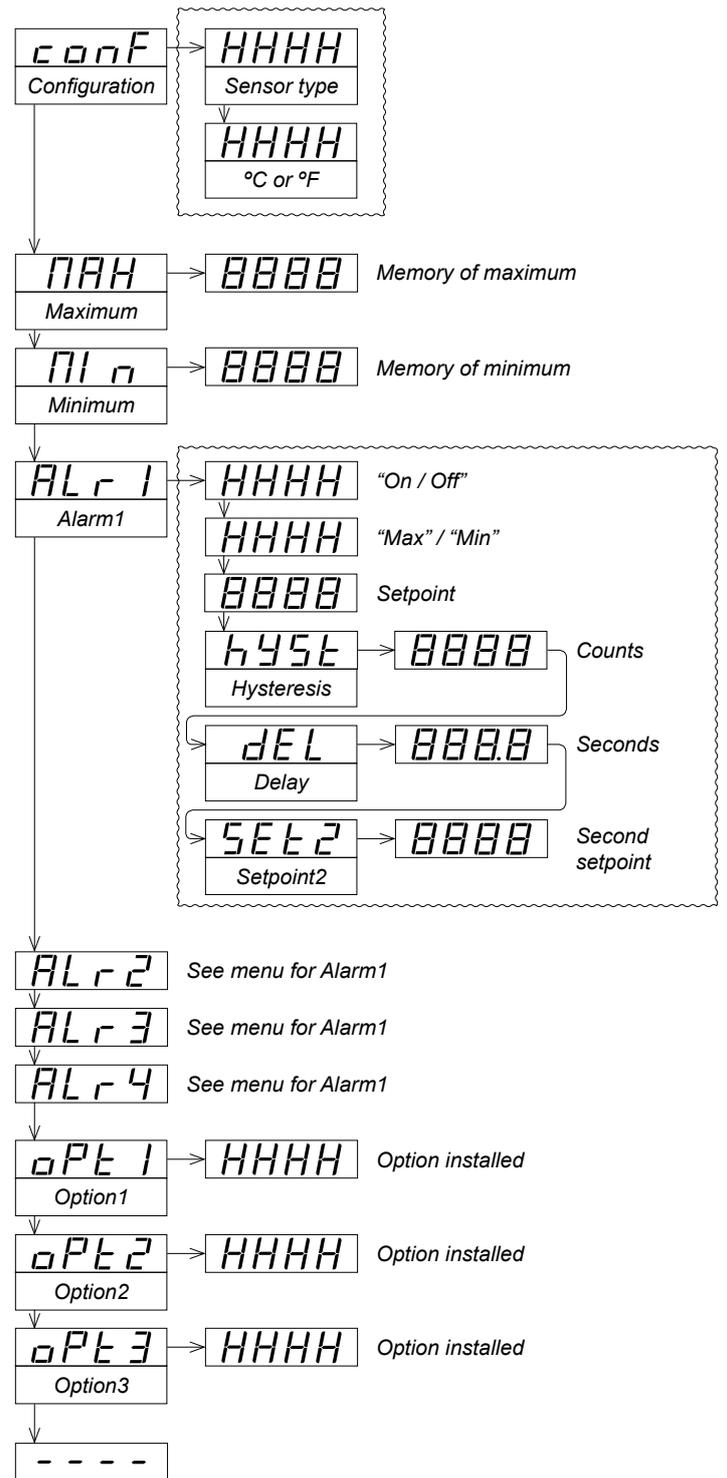

## Configuration Menu - Operation

To enter the "Configuration Menu" press the SQ button. The "Configuration Menu" allows to change the configuration of the instrument. Access to the "Configuration Menu" can be password protected with the function "PASSWord". During operation with the "Configuration Menu" the alarms are kept "on-hold". When leaving the "Configuration Menu" the instrument performs a restart, and new configuration is applied. During the restart of the instrument, a short alarm deactivation is performed.

**Configuration Menu Tree** - See page 6 and 7.

**Description of Configuration Menu functions** - See page 8 and 9.

**Rollback** - After 30 seconds without interaction from the operator, the instrument leaves the "Configuration Menu", discarding all changes.

**Button SQ** - Moves horizontally on the menu. Allows selection of the current option displayed. During a value selection menu (for example a setpoint value) validates the value on display.

**Button UP** - Moves vertically on the menu. Displays the available menu options. During a value selection menu (for example a setpoint value) increases digit value from 0 to 1, 2, 3, 4, 5, 6, 7, 8, 9.


**Button LE** - Leaves the current menu. Pressing LE several times will leave all menus and leave the "Configuration Menu" tree. During a value selection menu (for example a setpoint value) allows to select each digit for modification with the UP button.

**Reset** - Leaving the "Configuration Menu" forces a restart of the instrument, even in case of no changes in configuration.


## Default factory configuration

Sensor	Pt100 2Wire
Degrees	°C
Resolution	0.1°
Offset	0
On Break	To high
Alpha	385
Alarms 1,2,3 and 4	
Active	Off (not managed)
Type	maximum
Setpoint	1000
Hysteresis	0 counts
Delay	0.0 seconds
Setpoint2	Off
Display	
Steps	Off
Memory of maximum	-9999
Memory of minimum	9999
Tools	
Password	Off
Brightness	3

## Configuration Menu

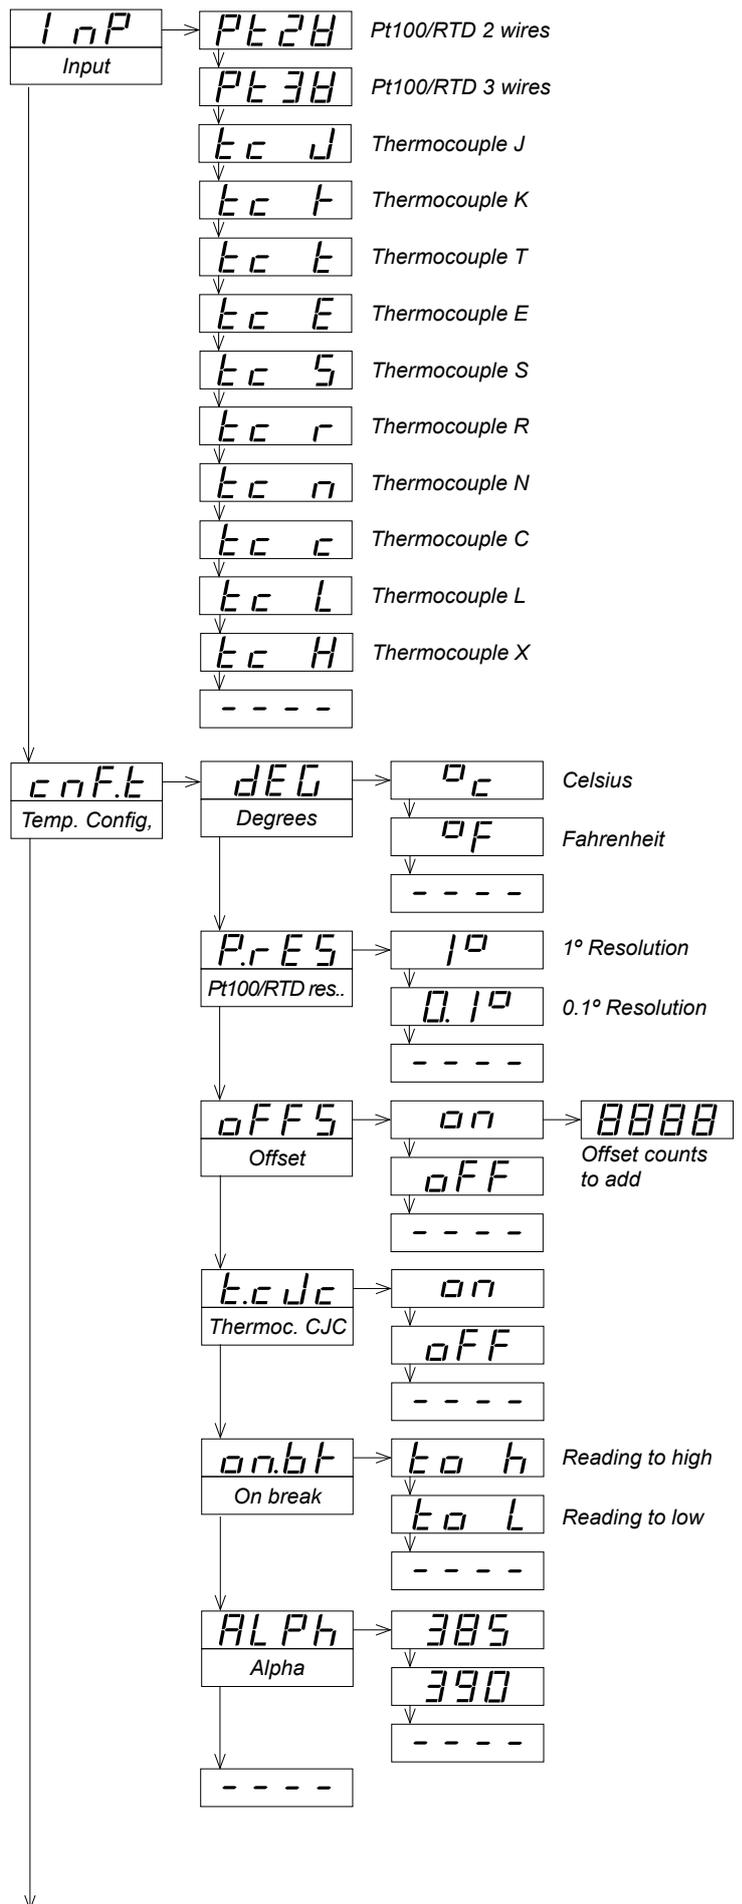

# Configuration Menu

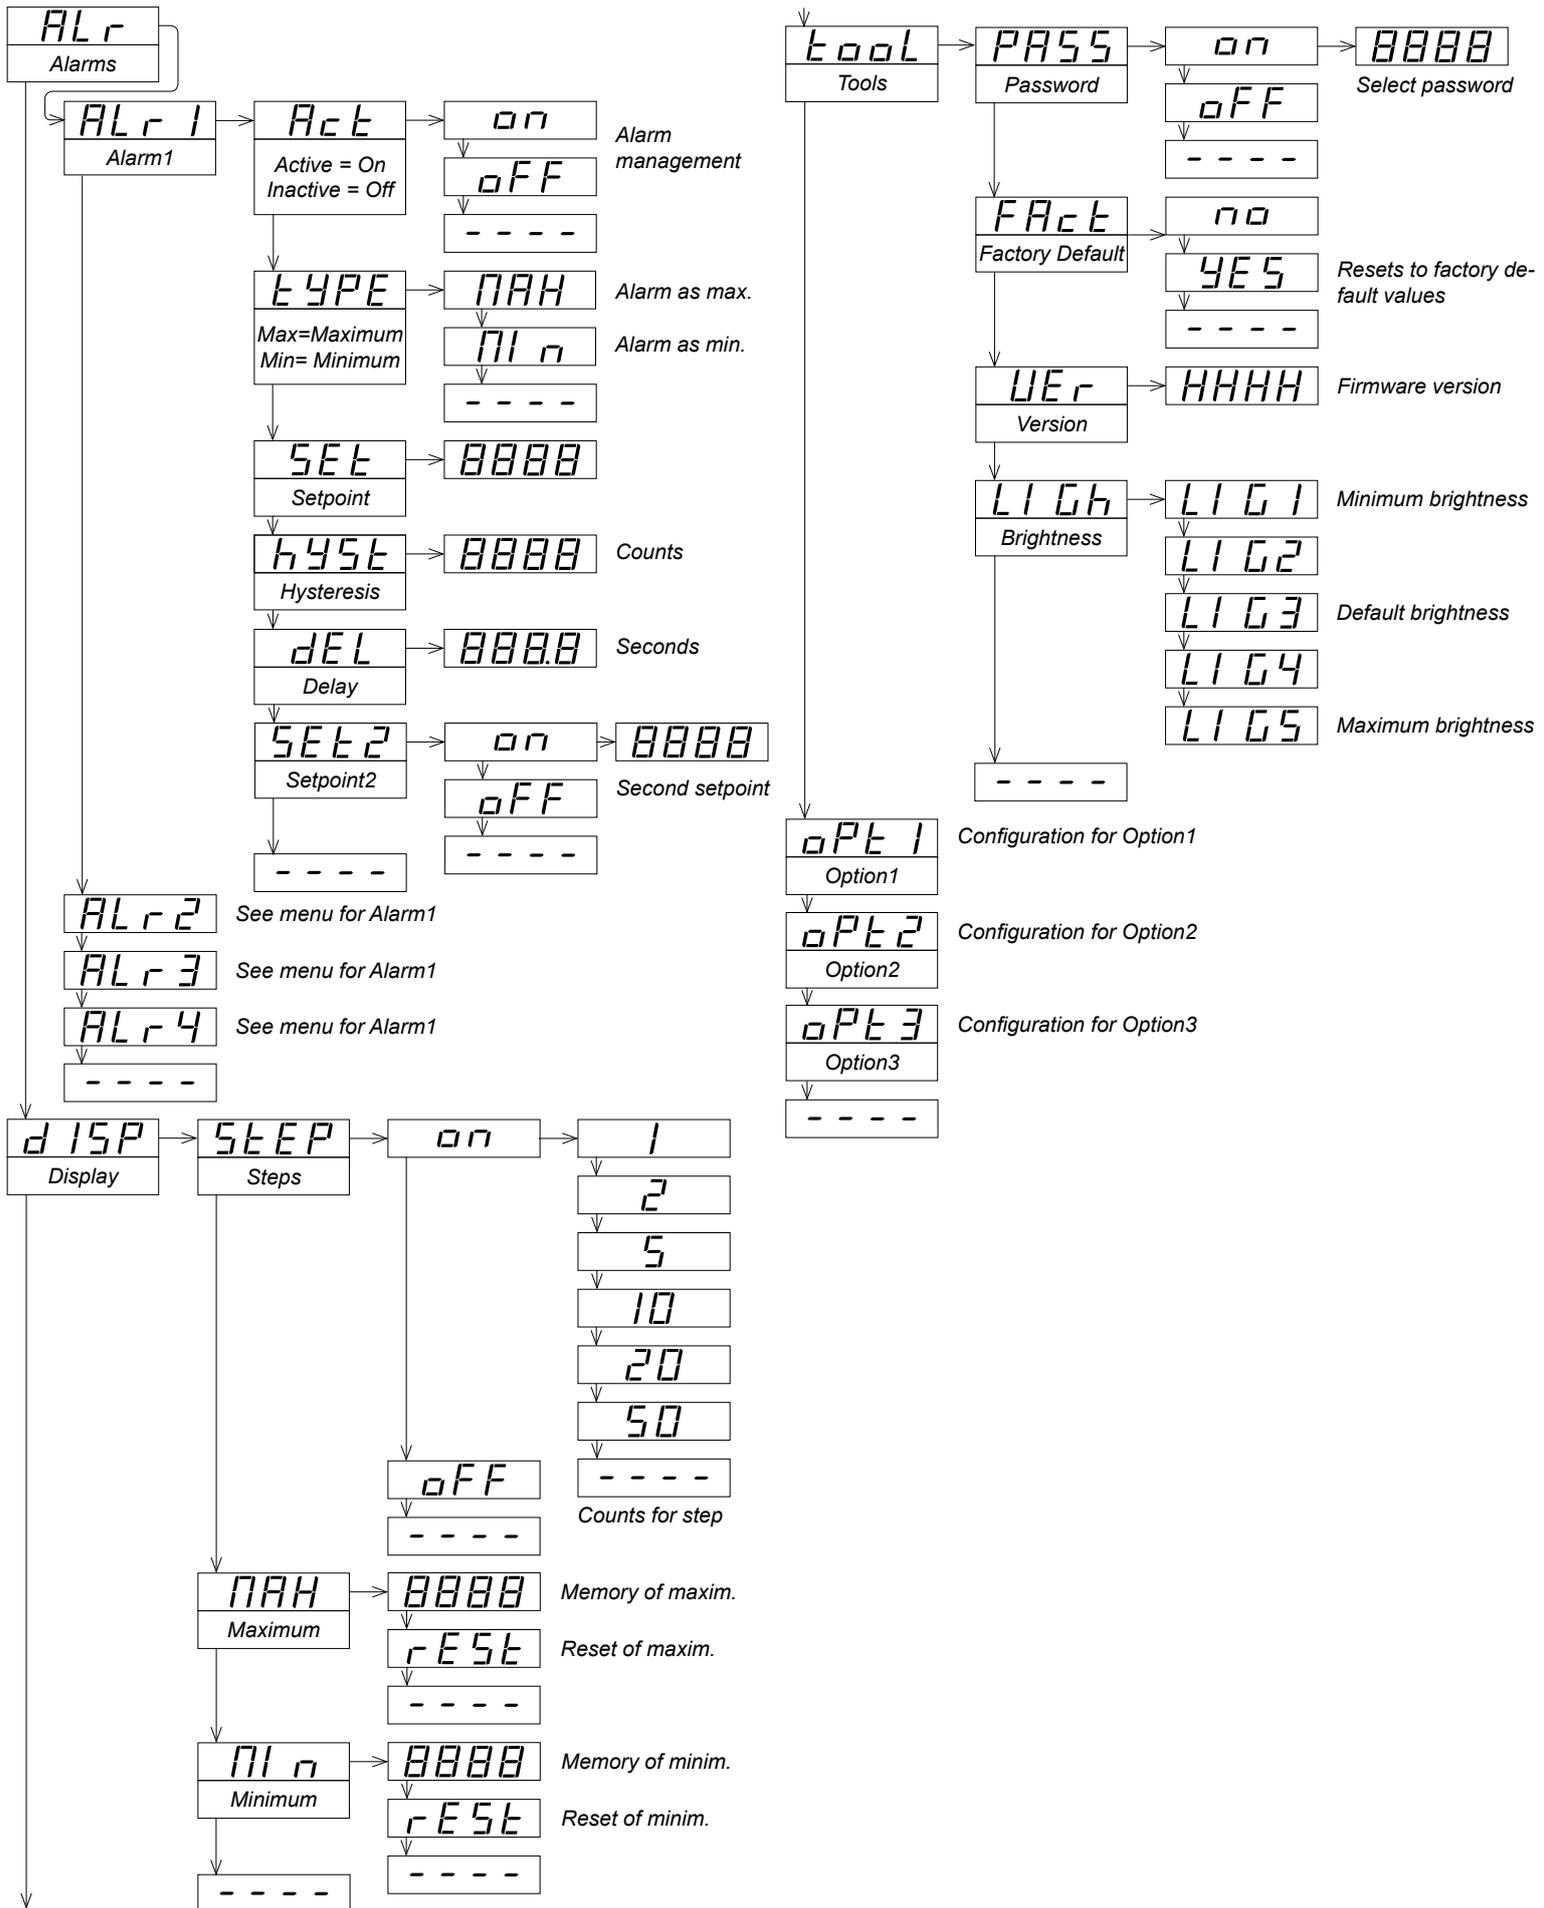

## Input Menu

The input menu selects the input signal range. Options available are Pt100/RTD 2 or 3 wires, and thermocouples J, K, T, E, S, R, N, C, L and X.

*Note - Thermocouple X is a linear signal at 10uV/°C.*

## Temperature Configuration Menu

The temperature configuration menu sets the function parameters for Pt100/RTD and thermocouple sensors.

**Degrees (dEG)** - Value "°C/°F". Select the temperature to be displayed in celsius or fahrenheit degrees.

**Pt100/RTD resolution (P.rES)** - Value "1°/0.1°". Resolution for the Pt100/RTD. Select to display with degree or tenth of degree resolution.

**Offset (oFFS)** - Value from "-9999" to "9999" counts. Offset to be added to the reading. Both for Pt100/RTD and thermocouples.

**Thermocouple Cold Junction Compensation (t.cJc)** - Value "On/Off". Select "On" for automatic CJC compensation in the instrument. Select "Off" to disable the CJC compensation.

**On break (on.bk)** - Value "to\_h/to\_l". Select "To L" to make the reading go to minimum, in case of probe broken. Select "To H" to make the reading go to maximum in case of probe broken.

**Alpha (ALPh)** - Value "385/390". Select "385" or "390" according to your Pt100/RTD sensor.

## AlarmX Menu

The instrument manages up to 4 alarms. Each alarm is controlled by the condition "display higher (or lower) than the configured setpoint". The front leds are controlled by the activation / deactivation of the related alarm. The relays installed on Option1 and/or Option2 are controlled by Alarm1 and Alarm2.

**Active (Act)** - Value "On/Off". Defines if the instrument has to manage this alarm or not. Select "Off" for alarm not managed.

**Type (tyPE)** - Value "Max/Min". Defines the behavior of the alarm as maximum or minimum alarm. The alarms configured as maximum are activated when the display value is equal or higher than the setpoint. The alarms configured as maximum are deactivated when the display is lower than the setpoint. The alarms configured as minimum have the inverse behavior.

**Setpoint (SEt)** - Value from "9999" to "-1999". Alarm set point.

**Hysteresis (hySt)** - Value from "0" to "9999". Points of hysteresis. The hysteresis applies on the deactivation of the alarm.

**Delay (dEL)** - Value from "0.0" to "99.9" seconds. Delay to be applied to the relay activation and deactivation. Relays are activated and deactivated X seconds after the activation / deactivation of the alarm. The delay affects only to the relays. The delay does not affect to the front leds.

**Setpoint2 (SEt2)** - Value from "-1999" to "9999". Second setpoint. The second setpoint allows for the creation of activation windows. If the alarm is configured as maximum with setpoint 1000 and setpoint2 is configured at 1500, the alarm will be activated between 1000 and 1500 and the alarm will be deactivated when display is <1000 and >1500. Setpoint2 is affected on the same way as the setpoint with hysteresis and delays.

## Display Menu

Functions on this menu allow for configuration of the visualization.

**Steps (StEP)** - Display changes on predefined steps. Values are 1, 2, 5, 10, 20 and 50. The display is made in steps of X counts. For example, select a step of 20 will make the display to change in steps of 20 (1420, 1440, 1460, ...).

**Maximum (MAX)** - Memory of maximum display. Indicates the maximum value of display since the last reset of the memory. Memory is reset on the following cases : manual reset from the Configuration Menu (Maximum), change on the input signal (Input), modification on the scaling (Scaling), change on the decimal point (dP), modification of the linearization segments, or instrument power-down.

**Minimum (MIn)** - Memory of minimum display. Indicates the minimum value of display since the last reset of the memory. Memory is reset on the following cases : manual reset from the Configuration Menu (minimum), change on the input signal (Input), modification on the scaling (Scaling), change on the decimal point (dP), modification of the linearization segments, or instrument power-down.

## Tools Menu

**Password (Pass)** - Select a number to act as password. This password will be requested when entering the Configuration Menu. To deactivate the password select "Off".

**Factory Settings (Fact)** - Factory default configuration. Select "yES" to activate the factory default configuration.

**Version (Ver)** - Firmware version installed.

**Light (Ligh)** - Luminosity. Select between 5 predefined levels of luminosity.

## Options Menu

Menu options OPT1, OPT2 and OPT3 give access to the configuration menus of the installed options. The menu depends on the installed option. If there is no option installed the instrument shows "nonE".

## Messages and errors

When the instrument detects that the displayed value does not correspond to the input value, the display will flash and alternate with a message.

**"h.udr"** Hardware underrange. The thermocouple signal is lower than minimum readable signal (-30mV).

**"h.ovr"** Hardware overrange. The thermocouple signal is higher than maximum readable signal (80mV).

**"d.udr"** Display underrange. The Pt100/RTD is shortcircuited.

**"hoLd"** The instrument is showing the value present when the hold function was activated. Hold function is active.

**"Min"** The instrument displays the minimum displayed value in memory. The minimum visualization is active.

**"MAX"** The instrument displays the maximum displayed value in memory. The maximum visualization is active.

**"brk"** The instrument displays "brk" with either "9999" or "-9999" when : 1) resistance measured is higher than 390 Ohms (higher than 850°C for PT100/RTD measure), or 2) in case the third wire ohm is higher than 15 Ohm, or 3) thermocouple measure is open circuit.

**Err.1** Password incorrect.


**Err.2** The instrument has detected an installed option but was unable to communicate.

THIS SECTION BLANK

### Option R1 - 1 relay

Relay type                    3 contacts (Common, NC, NO)  
 Maximum current         8A (resistive load)  
 Voltage                     250 Vac continuously  
 Instalable in              Option1 and/or Option2 and/or Option3

Connections for Option3      Connections for Option1 and 2

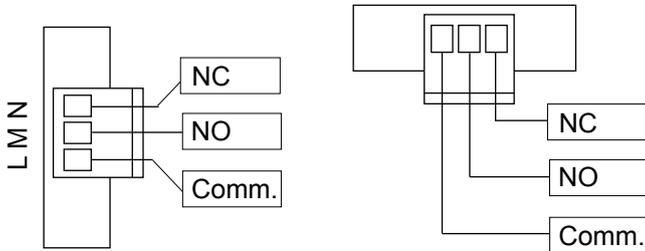

### Accessing the instrument


You may need to access the inside of the instrument to insert additional options. Use a flat screwdriver to unlock the upper clips marked with "A". Then unlock the lower clips marked with "B" and move out the front filter. Let the inside of the instrument slide out of the housing.

To reinsert the instrument make sure that all modules are correctly connected to the pins on the display module. Place all the set into the housing, assuring that the modules correctly fit into the internal guiding slides of the housing. Once introduced, place again the front filter by clipping first the upper clips "A" and then the lower clips "B".

Important - If your instrument was delivered with the IP65 front seal option, accessing the inside of the instrument will permanently break the IP65 seal on the areas of clips "A" and "B".

### Warranty

All instruments are warranted against all manufacturing defects for a period of 24 MONTHS from the shipment date. This warranty does not apply in case of misuse, accident or manipulation by non-authorized personnel. In case of malfunction get in contact with your local provider to arrange for repair. Within the warranty period and after examination by the manufacturer, the unit will be repaired or substituted when found to be defective. The scope of this warranty is limited to the repair cost of the instrument, not being the manufacturer eligible for responsibility on additional damages or costs. .

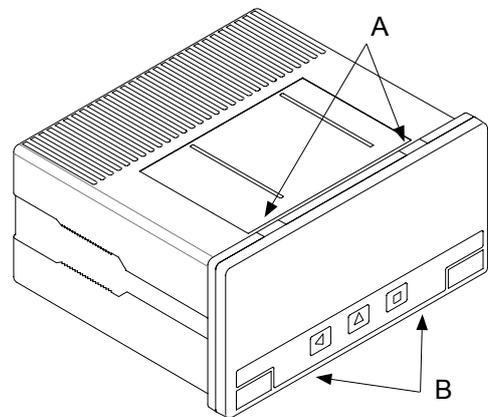

### CE Declaration of Conformity

Manufacturer FEMA ELECTRÓNICA, S.A.  
 Altimira 14 - Pol. Ind. Santiga  
 E08210 - Barberà del Vallès  
 BARCELONA - SPAIN  
 www.fema.es - info@fema.es

Products - M40-T

The manufacturer declares that the instruments indicated comply with the directives and rules indicated below.

Directive of electromagnetic compatibility 2004/108/CEE  
 Directive of low voltage 73/23/CEE

#### Security rules 61010-1

Equipment "Fixed"  
 "Permanently connected"  
 Pollution Degree 1 and 2 (without condensation)  
 Isolation Double

#### Emission rules

61000-6-4 Generic rules of emission

#### Immunity rules

- 61000-6-2 Generic rules of immunity
- 61000-4-2 By contact ±4KV - Criteria B  
 On air ±8KV - Criteria B
- 61000-4-3 Criteria A
- 61000-4-4 On AC power lines: ±2KV - Criteria B  
 On DC power lines: ±2KV - Criteria B  
 On signal lines : ±1KV - Criteria B
- 61000-4-5 Between AC power lines ±1KV - Criteria B  
 Between DC power lines ±0.5KV - Criteria B
- 61000-4-6 Criteria A
- 61000-4-8 30A/m at 50Hz - Criteria A
- 61000-4-11 0% 1 cycle Criteria A  
 40% 10 cycle Criteria B  
 70% 25 cycle Criteria B  
 0% 250 cycle Criteria B

Barberà del Vallès November 2011  
 Daniel Juncà - Quality Manager

THIS PAGE BLANK

# other products



Panel Meters  
Standard 96x48mm



Panel Meters  
Small 72x36mm



Panel Meters  
Miniature 48x24mm



Large Displays  
60&100mm digit



Signal Converters  
& Isolators



Panel Meters  
Standard 96x48mm

[www.fema.es](http://www.fema.es)

ELECTRONIC INSTRUMENTATION FOR INDUSTRY

FEMA ELECTRÓNICA, S.A.  
Altimira 14 - Pol. Ind. Santiga  
E08210 Barberà del Vallès  
BARCELONA - SPAIN

Tel. (+34) 93.729.6004 - [www.fema.es](http://www.fema.es)  
Fax (+34) 93.729.6003 - [info@fema.es](mailto:info@fema.es)